

BATTERY REPLACEMENT GUIDE

# MOTION DETECTOR

Model 5800



BATTERY YOU'LL NEED

**CR123**

One CR123 lithium battery



**Please Note:** When you open the cover you may hear your keypad start beeping — that's the tamper switch, and it's completely normal. The reset at the end silences it and clears the low-battery message.

**Open the cover:** Insert a flat-head screwdriver into the recessed tab on the **bottom edge** of the detector and twist gently until the front cover releases.



**Replace the battery:** Remove the old battery and install a new **CR123** battery, matching the + and - markings inside the compartment.

**Close the cover:** Engage the tab at the **top** of the cover first, then swing the bottom closed until it clicks.



**You can now reset your system:** Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF.*) The beeping stops and the low-battery message clears — your system is ready to use again.

**Any Questions? Please give us a call:**

**(718) 698-8244**