

BATTERY REPLACEMENT GUIDE

PANIC BUTTON

Model 5802WXT



BATTERY YOU'LL NEED

CR2032

One CR2032 coin battery, positive (+) up



Please Note: This is your portable single-button panic transmitter. Replacing the coin battery takes just a minute.

The housing and contacts are delicate. Work gently when separating the cover and lifting out the coin battery so you don't crack the case or bend the metal tab.

Open the back: Turn the button over and remove the **small Phillips screws** on the back with a precision screwdriver.



Release the cover: Insert a flat-head screwdriver into the notch on the **side seam** and twist gently to separate the two halves.

Replace the battery: Lift out the old coin battery and install a new **CR2032** with the **positive (+) side up**, slipping it under the metal tab.



Close the button: Fit the halves back together and re-fasten the screws.

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244