

# BATTERY REPLACEMENT FOR 5816




**Please Note:** Upon opening the sensor cover, you may hear your keypad beeping. This is the tamper switch contained in certain model sensors.

After you have replaced the battery, and closed the sensor cover, you will reset your system. This will silence the beeping, and clear the low battery message from the display.



**Open the cover:** Push in on the tab until cover releases (see image to right). Remove cover.

**Remove old battery** from sensor. The battery required for this model is part number CR123. Install the new battery.

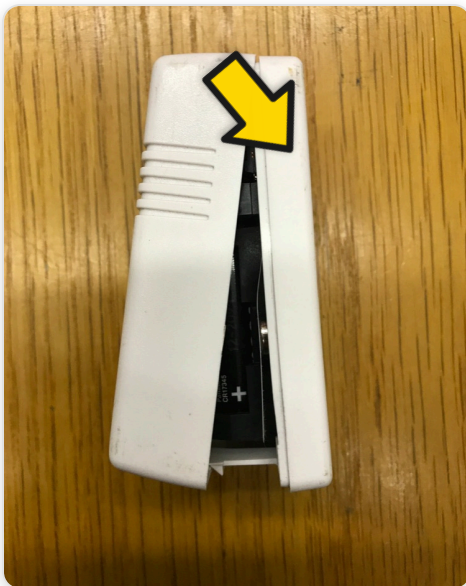

**Please note:** Sometimes the antenna (see arrow) will get caught around the tab. Prior to closing, make sure antenna is inside sensor and out of the way.

**Close the cover:** Hinge at side opposite of the tab (left image) then swing the bottom down to engage the tab. You should hear a “click” when fully closed.

**You can now reset your system:** Enter your 4 digit code and OFF two times. (Code + OFF, Code + OFF) Your system should now be ready to use again!

**Any Questions? Please give us a call:  
(718) 698-8244**