

UNIVERSAL TRANSMITTER

Model 5817CBXT



BATTERY YOU'LL NEED

CR123

One CR123 lithium battery



Please Note: When you open the cover you may hear your keypad start beeping — that's the tamper switch, and it's completely normal. The reset at the end silences it and clears the low-battery message.

Open the cover: Insert a flat-head screwdriver into the notched tab on the **bottom** of the transmitter and twist gently until the cover releases.



Replace the battery: Remove the old battery and install a new **CR123** battery, matching the + and - markings inside.

Close the cover: Place the cover back onto the base and press until it snaps shut.

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244