

# RECESSED DOOR SENSOR

Model 5818MNL



BATTERY YOU'LL NEED

**AAA Lithium**

One AAA lithium battery



**Please Note:** You'll only see the small round cover of this sensor — the body is recessed inside the door or door frame. When you open the cover you may hear your keypad start beeping — that's the tamper switch, and it's completely normal. The reset at the end silences it and clears the low-battery message.

**Open the cover:** Insert a flat-head screwdriver into the center indentation of the cover and twist it **counter-clockwise 90°** to release it.



**Replace the battery:** Remove the old battery and install a new **AAA lithium** battery.

**Close the cover:** Reinsert the screwdriver into the center indentation and twist **90° clockwise** to lock the cover closed.

**You can now reset your system:** Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

**Any Questions? Please give us a call:**

**(718) 698-8244**