

BATTERY REPLACEMENT GUIDE

WIRELESS KEY FOB

Model 5834



BATTERY YOU'LL NEED

CR2032



One CR2032 coin battery, positive (+) side up



Please Note: This pocket remote arms and disarms your system. Replacing the coin battery takes just a minute — the only catch is the small metal contacts inside.

The metal around the battery is delicate. Take care not to bend or damage the surrounding metal contacts when you lift the old battery out.

Open the fob: Flip the fob over and use a **very small Phillips screwdriver** to remove the screw on the back, then insert a flat-head screwdriver into the recessed notch on the side and twist slightly until the cover releases.

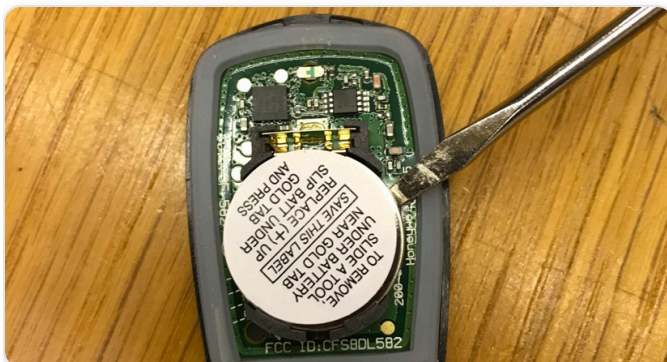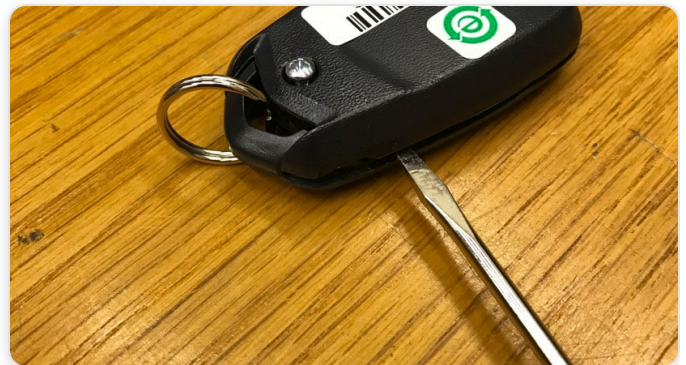

Remove the old battery: Gently place a butter knife or small flat-head screwdriver under the outer edge of the round battery and lever it up carefully.

Install the new battery: Install a new **CR2032** battery with the **positive (+) side up**. Slip it under the gold tab and press it into place.

Close the fob: Place the cover back onto the fob and re-fasten the original screw.

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF.*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244