

GLASS BREAK DETECTOR

Model 5853



BATTERY YOU'LL NEED

CR123

Some older units use two CR123 batteries



Please Note: When you open the cover you may hear your keypad start beeping — that's the tamper switch, and it's completely normal. The reset at the end silences it and clears the low-battery message.

Open the cover: Insert a flat-head screwdriver into the notched tab on the sensor and twist slightly until the cover releases. Open the cover.



Replace the battery: Remove the old battery and install a new **CR123** battery. **Note:** older models contain **two** batteries — replace both if yours has them.

Close the cover: Swing the cover closed to engage the tab. You should hear a “click” when it's fully closed.

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244