

PIR MOTION DETECTOR

Model 5890



BATTERY YOU'LL NEED

CR123 × 2

This model uses two CR123 batteries



Please Note: When you open the cover you may hear your keypad start beeping — that's the tamper switch, and it's completely normal. The reset at the end silences it and clears the low-battery message.

Open the cover: Insert a flat-head screwdriver into the recessed tab on the **bottom center** of the detector and twist slightly until the cover releases. Remove the cover.



Replace the batteries: Remove both old batteries and install two new **CR123** batteries, matching the + and - markings.

Close the cover: Engage the tab at the **top** of the cover first, then swing the bottom down until you hear a “click.”

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244