

WIRELESS SMOKE DETECTOR

Model Smoke Detector



BATTERY YOU'LL NEED

CR123

Early units use two CR123 batteries



Please Note: When you twist the detector off its base you may hear your keypad start beeping — that's the tamper switch inside the detector, and it's normal. The reset at the end silences it.

Remove the detector from its base: Twist the detector **counter-clockwise** to release it from the mounting base. You may need to depress the small tab on the base to free it.



Replace the battery: Remove the old battery and install a new **CR123** battery. **Note:** early versions use **two** batteries — those units have a single red light on the face and no green light.

Reinstall the detector: Set the detector back into the mounting base and twist it **clockwise**. When fully seated it will no longer rotate in the base.

You can now reset your system: Enter your 4-digit code and press **OFF**, then enter your code and press **OFF** again. (*Code + OFF, Code + OFF*) The beeping stops and the low-battery message clears — your system is ready to use again.

Any Questions? Please give us a call:

(718) 698-8244