

**APB's Quick Reference
Alarm Operating Instructions
718-698-8244**

**Central Station 718-494-6414
Acct. # _____
Test alarm monthly & after storms**

Arming the system when leaving

- Wait for green "ready" light to come on. If the light does not come on and the keypad reads "**not ready**", then press the * "**ready**" button to show any faults (opened zones).
- If you are unable to determine why a particular zone is showing "**not ready**", then you must bypass that zone before you can turn your alarm on. (See Bypassing a Zone)
- Once the system is ready then proceed to press your four-digit **code**, plus the 2 "**away**" button.
- The keypad will beep twice and the red armed-light will come on. If this does not happen, repeat the steps.
- You now have _____ seconds to leave.

Arming the system when staying home

There are two ways to arm the system when staying home.

- (1) Stay mode – Arms the system, bypasses all interior zones designated as interior and leaves a delay on your entry door(s).
 - Wait for green "**ready**" light to come on. If the light does not come on and the system reads "**not ready**", then press the * "**ready**" button to show any faults (opened zones).
 - If you are unable to determine why a particular zone is showing "**not ready**", then you must bypass that zone before you can turn your alarm on. (See Bypassing a Zone)
 - Once the system is ready then proceed to press your four-digit **code**, plus the 3 "**stay**" button.
 - The keypad will beep three times and the red armed-light will come on. If this does not happen, repeat the steps.
- (2) Instant mode – Arms the system, bypasses all interior zones designated as interior and leaves no entry delay on your entry doors.
 - Wait for green "**ready**" light to come on. If the light does not come on and the system reads "**not ready**", then press the * "**ready**" button to show any faults (opened zones).
 - If the system is ready then proceed to press your four-digit **code**, plus the 7 "**instant**" button.
 - If you are unable to determine why a particular zone is showing "**not ready**", then you must bypass that zone before you can turn your alarm on. (See Bypassing a Zone)
 - The keypad will beep three times and the red armed-light will come on. If this does not happen, repeat the steps.

Quick Arm

Quick Arm enables the user to arm their system without having to press their four-digit code first. Pressing the number sign “#” followed by away, stay or instant will also turn your alarm on. However # plus 1 “off” will not turn your alarm off.

Panic

There is a panic alarm built into your keypad. By holding down the “*” and “#” button at the same time the alarm will go off. This feature will work whether the alarm is on or off. When central receives a panic alarm, they will call you for a codeword.

Disarming the system

--Once you come through the entry door(s), you will have _____ seconds to shut the alarm off. Entry by any other doors besides the entry door(s) will cause the alarm to go off immediately.

--Once you have entered, proceed to press your four-digit code, plus the 1 “off” button.

--The keypad will beep once the red armed-light will go off.

To Reset Keypad after The Alarm went Off

--Press your four-digit code, plus the 1 “off” Now the keypad will display the zone number(s) that caused the alarm to go off.

--Press your four-digit code, plus the 1 “off” button again to clear the alarm memory.

Bypassing a zone or zones

--While your alarm is off press your four-digit code then the 6 “bypass” button, followed by the two-digit zone number* you wish to bypass. The keypad will then beep once. If you wish to bypass another zone, then proceed to enter the next two-digit zone number you wish to bypass immediately following that beep, and so forth. Example: To bypass zone 02, press the following numbers without pausing “your 4 digit code + 6 + 02”. Wait momentarily for 2 beeps, then the bypassed zone should appear on the keypad. Then arm the system in the normal manner (see “away”, “stay”, or “instant”).

***ALL ZONES CONTAIN TWO NUMBERS. EG...01..02..10..11,**

Chime Mode

--When chime mode is on, the keypad will beep twice whenever a door or window is opened with the alarm off. To turn this feature on or off, press your four-digit code, followed by the 9 “Chime” button.